



D-CHAIR

User manual




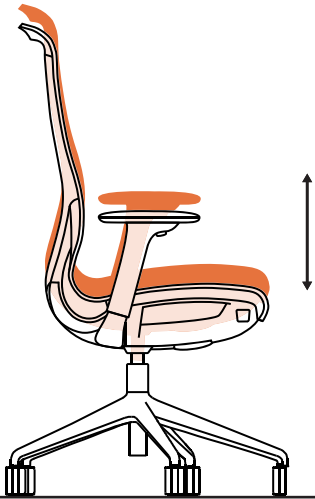

Seat height adjustment

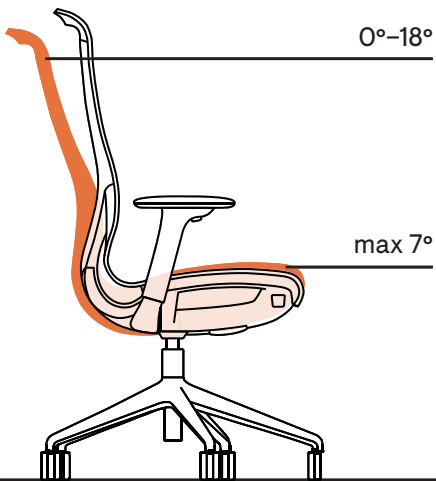


Backrest travel with backrest lock in upright position


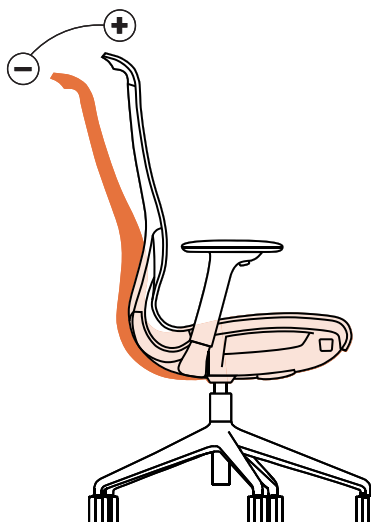


Tilt tension adjustment




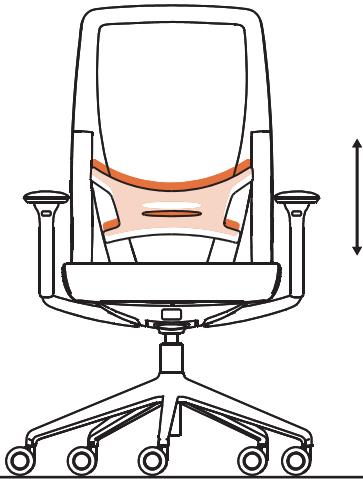

Height adjustable lumbar support

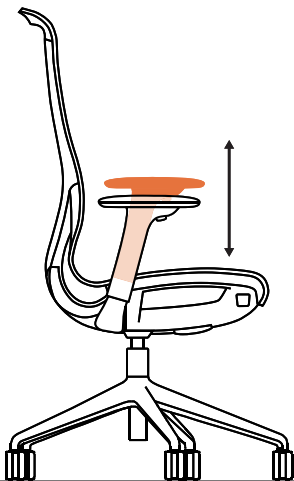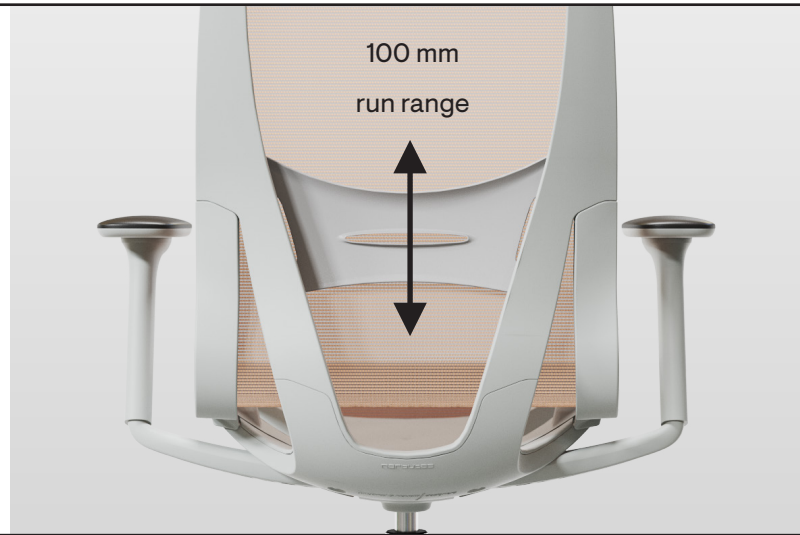2D, 4D
adjustable
armrests


Height adjustment at armrest carrier

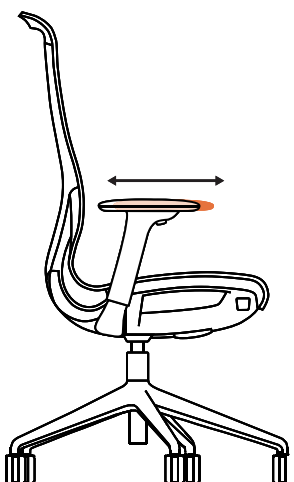2D, 4D
adjustable
armrests


Pad adjustment forward and backwards





2D (two directions) adjustable armrests
4D (four directions) adjustable armrests

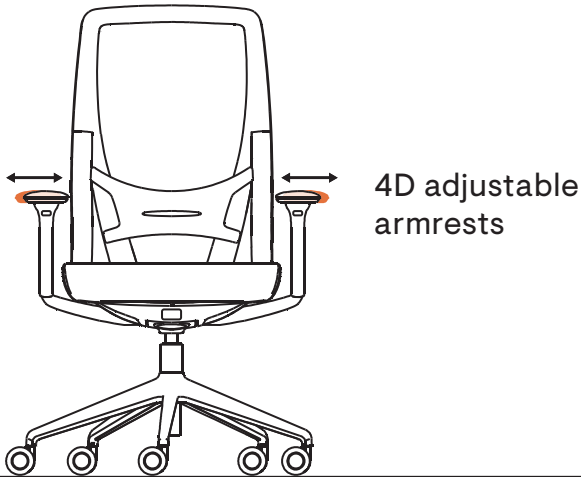

Pad adjustment sideways

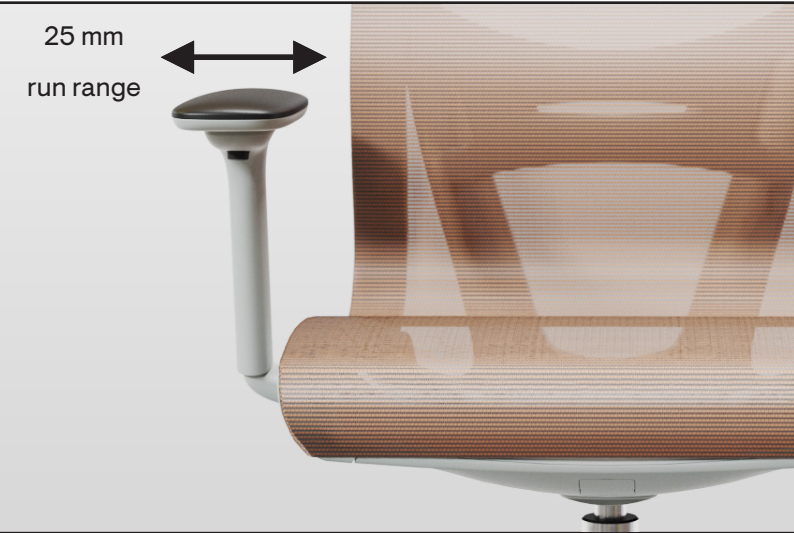

Pad rotation adjustment 15° one direction

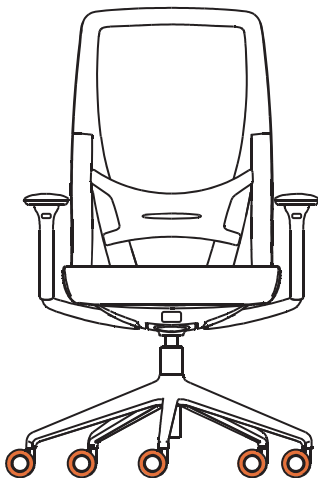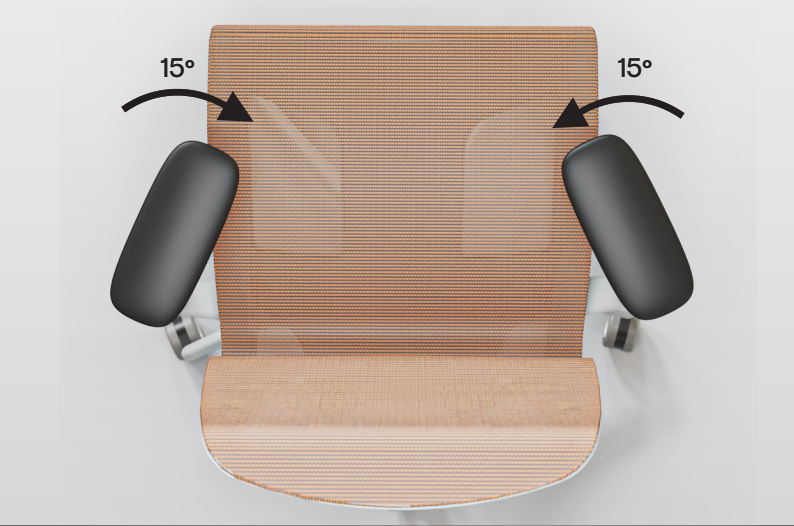

Self-brake castors

Note. Self-braking chair castors initiate the integrated friction break and stop moving when the chair is unused (no weight is applied to the seat).



for soft floor

for hard floor

4D (four directions) adjustable armrests

Other documents available for this product

Technical information for D-CHAIR chair family

Environmental product profile

NARBUTAS product care guide