



D-CHAIR

User manual




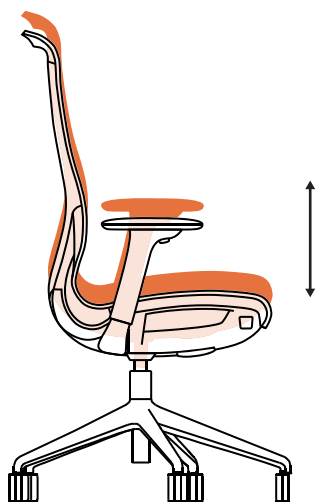

Seat height adjustment

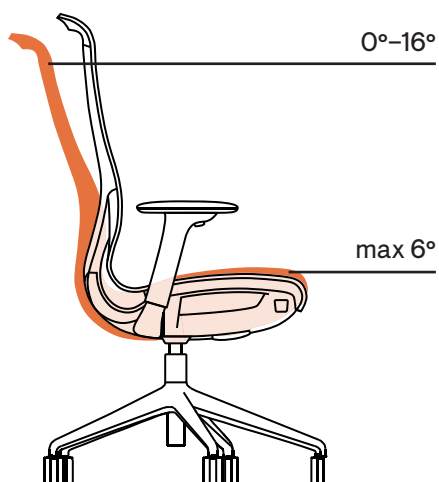


Backrest travel with backrest lock in upright position

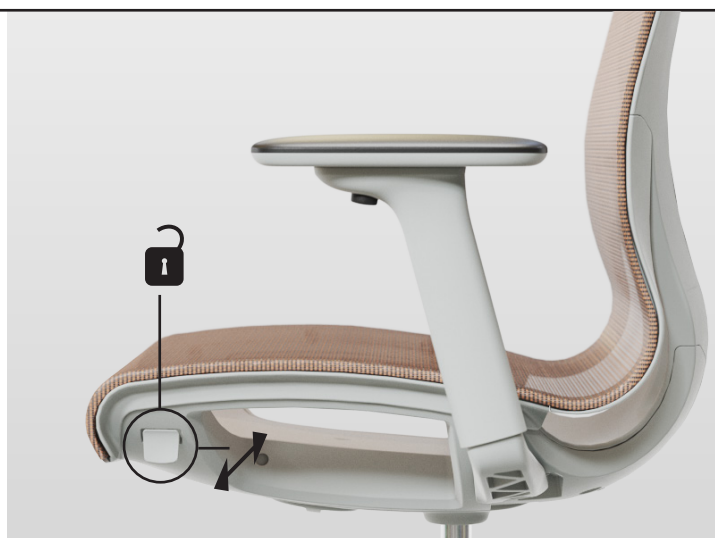

Tilt tension adjustment




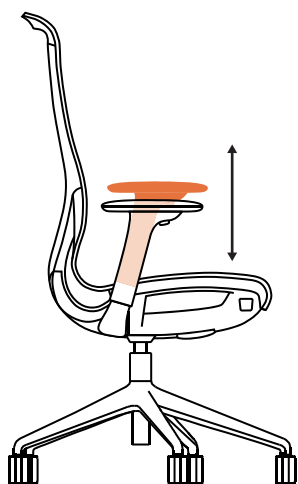

2D, 3D, 4D
adjustable
armrests

Height adjustment at armrest carrier



105 mm
run range

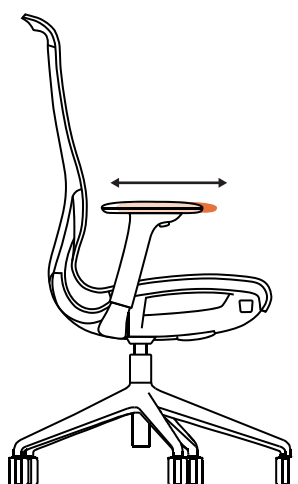

2D, 3D, 4D
adjustable
armrests

Pad adjustment forward and backwards



50 mm
run range

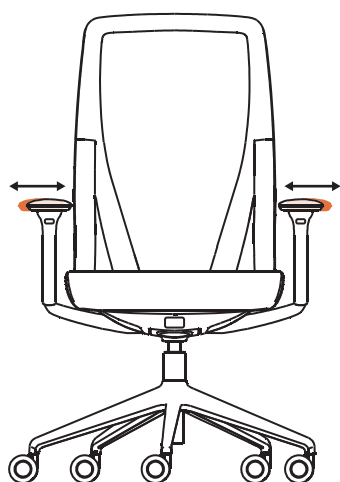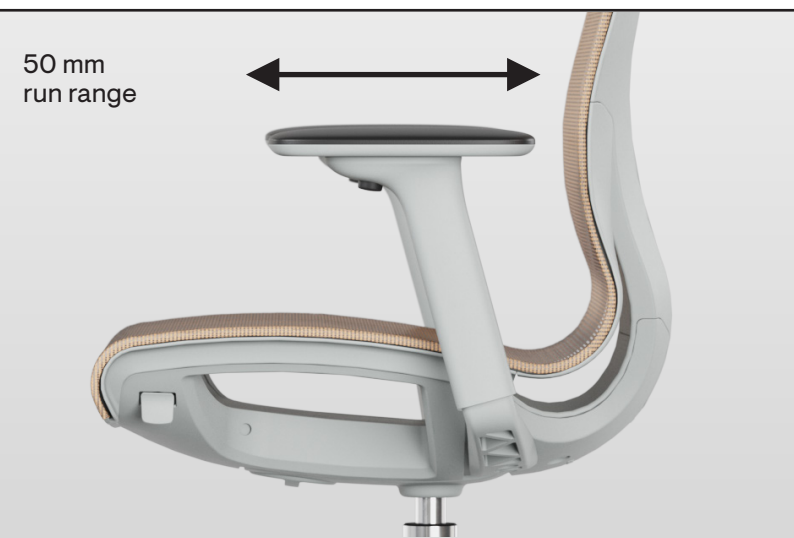


3D, 4D
adjustable
armrests

Pad adjustment sideways

 
25 mm
run range

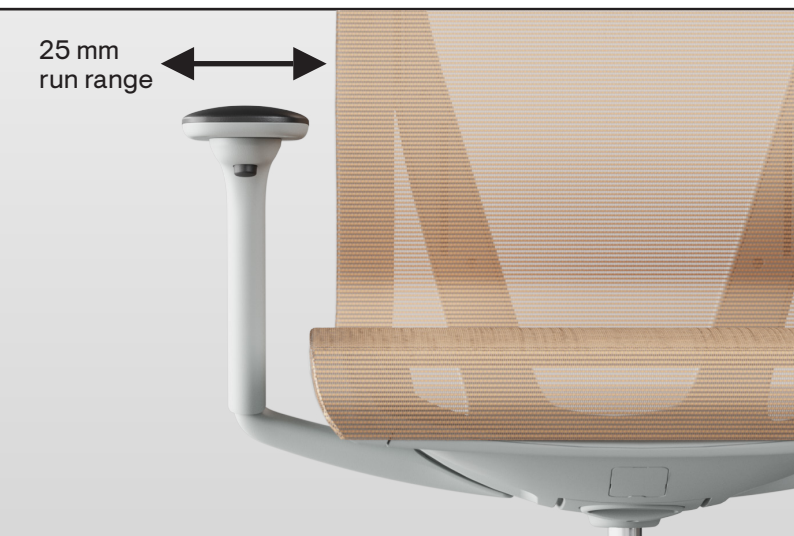


2D (two directions) adjustable armrests
3D (three directions) adjustable armrests
4D (four directions) adjustable armrests

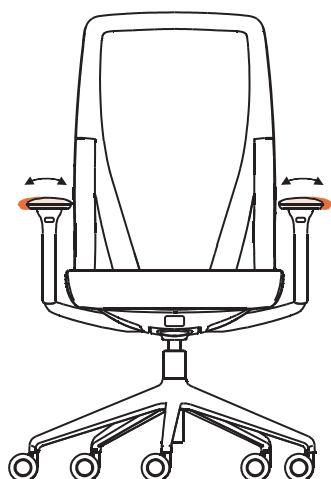

4D adjustable
armrests

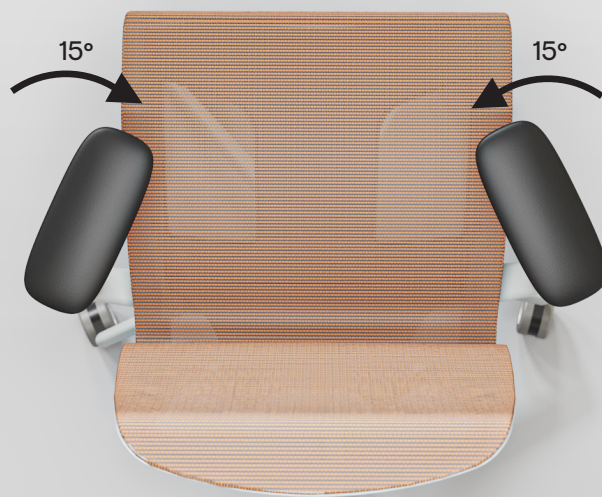

Pad rotation adjustment 15° one direction

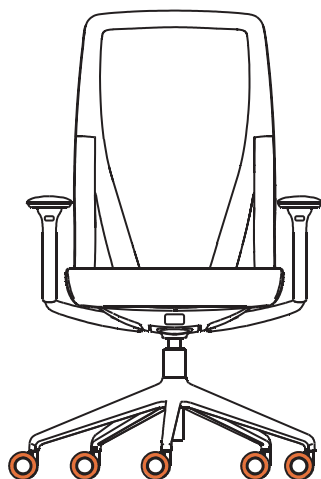

Self-brake castors



for soft floor



for hard floor

Note. Self-braking chair castors initiate the integrated friction break and stop moving when the chair is unused (no weight is applied to the seat).

4D (four directions) adjustable armrests

Other documents available for this product

Technical information for D-CHAIR chair family