

SILENT ROOM

OPERATION MANUAL



SAFETY AND WARNINGS

Inappropriate use of this product may cause property or bodily injury.

Check surroundings on all sides before using the furniture. Do not lean any objects neither to wall, nor to glass facade.

Ensure power cords are sufficient length to reach power outlet before starting assembly. SILENT ROOM should not be used in environments with high humidity.

If you need to relocate SILENT ROOM, DO NOT lift it or lean it only by holding/pulling single wall. Lifting/leaning will stress fasteners that connect the frames. One should disassemble before moving the SILENT ROOM!

Uneven floors require more accurate feet height adjustments.

Please provide this operation manual to any users, installers, or support personnel operating the product.

SETUP AND INSTALLATION

Choose a placement for the SILENT ROOM that is a safe distance from window frames, radiators, furniture etc. Once the SILENT ROOM has been assembled, **adjust the feet so that the object is in right horizontal level** (please refer to assembly scheme). **Do not shift its position after assembly.** Connect the SILENT ROOM to the outlet and it is ready for use. **For the first start of SILENT ROOM please turn on master switch ON on the control unit.**

TROUBLESHOOTING


If your SILENT ROOM does not function properly (automatic control of lighting and ventilation does not work), please do the RESET:

Press OFF and wait 30 seconds then press master switch ON on the control unit. Now the SILENT ROOM is ready for use. If this does not work please contact your seller.

USAGE


1. Switching on and off

Before using SILENT ROOM for the first time, you should press master switch ON on the control unit. Control unit is under the lid at the bottom of media wall.

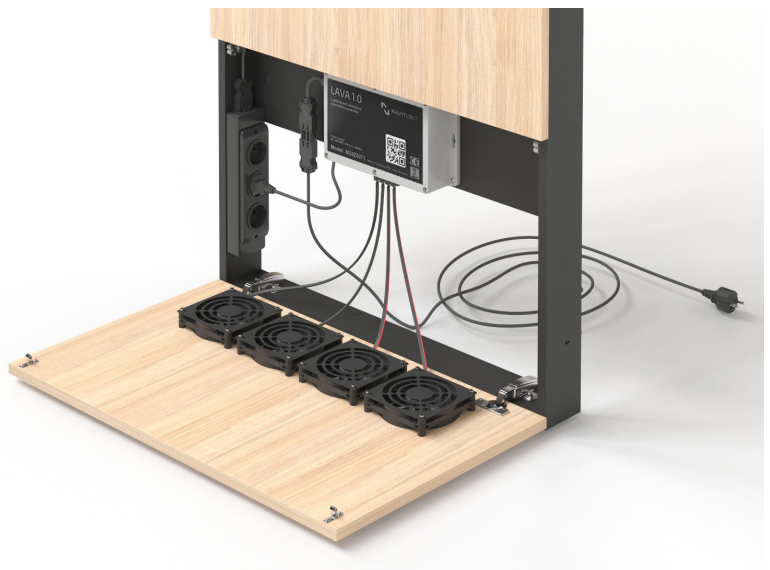


2. TV/monitor installment

For TV or monitor connection/disconnection, you should connect a cable from power unit to TV/monitor (look at assembly instructions, red color). Power cable should be plugged into one of power unit sockets, as the rest 3 sockets stay free for future connections.

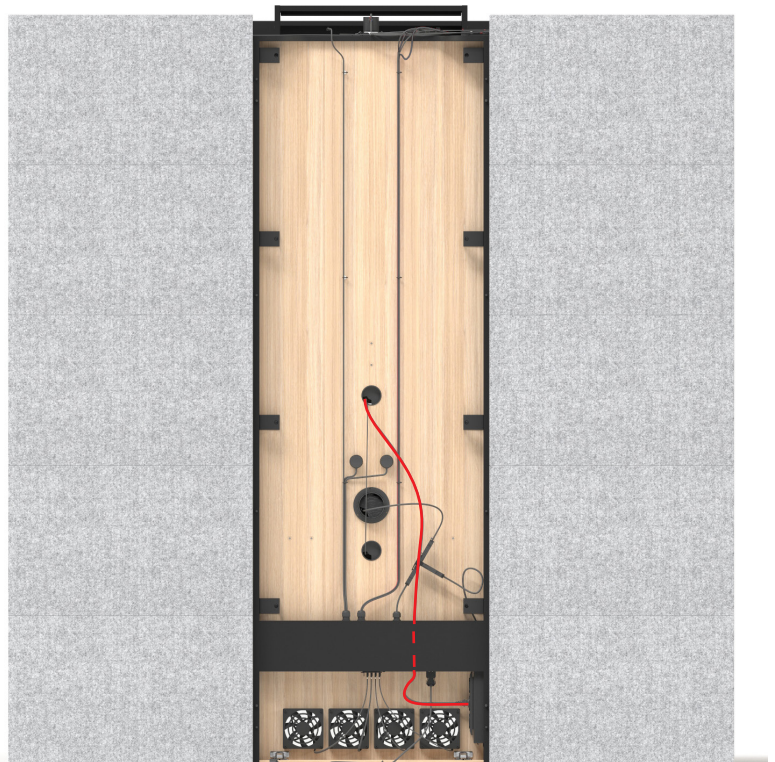


3. Automatic control scenario

For your convenience and for the purpose of energy saving SILENT ROOM has got automatic control of lighting and ventilation. You do not need to take care of switching on/off before/after usage.

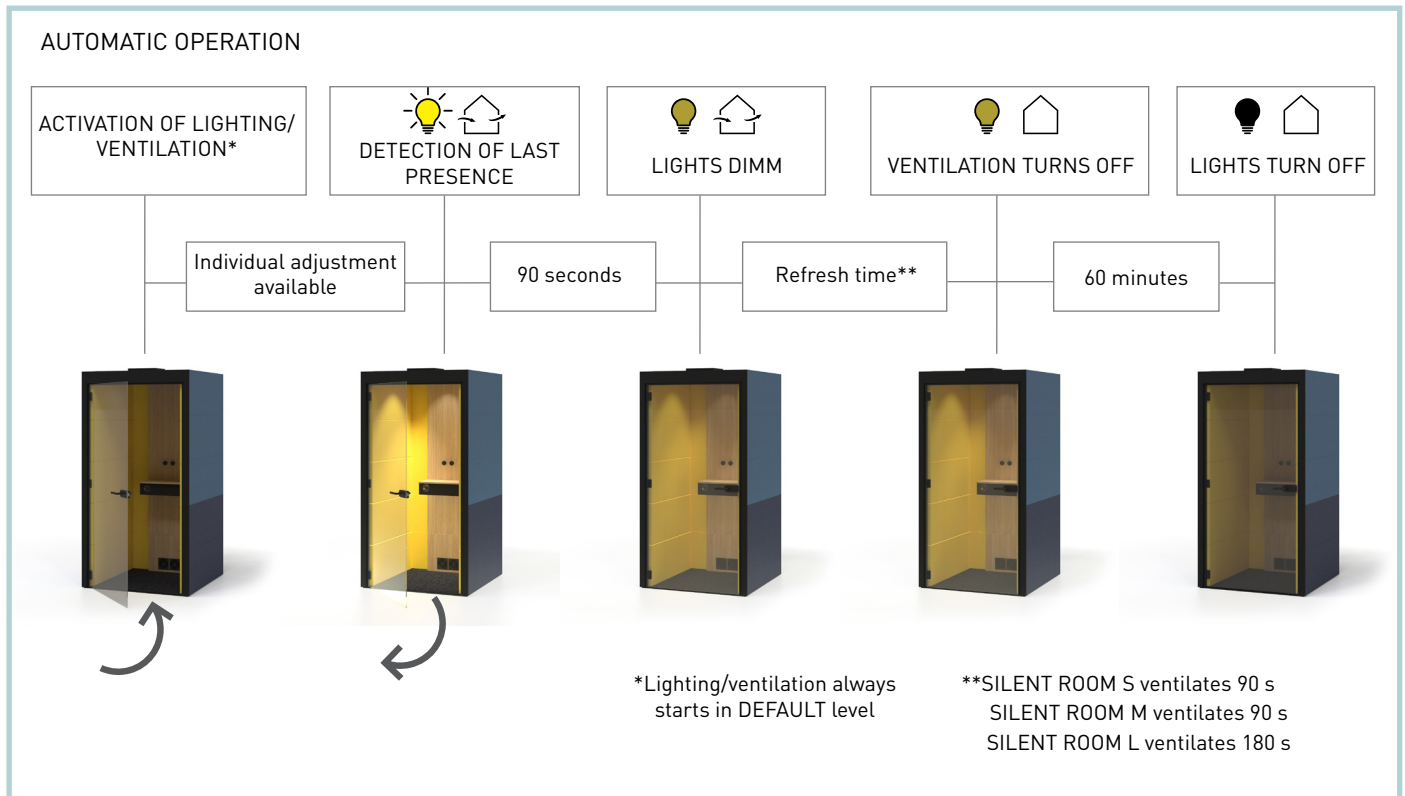

4. Control of lighting and ventilation

Nevertheless, SILENT ROOM lighting and ventilation works automatically, you are able to set it manually as well. After you enter SILENT ROOM, lighting and ventilation switches to default programmed average level. BY turning knobs right or left you are able to set lighting and ventilation level.

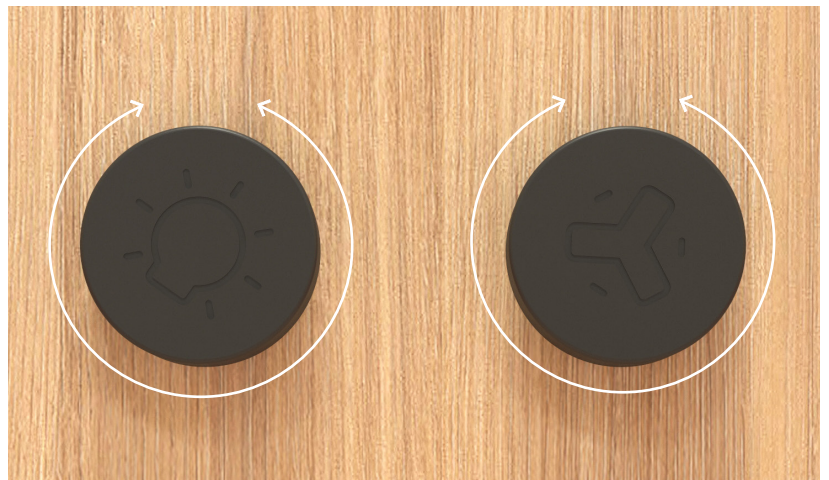

SILENT ROOM CLEANING AND MAINTENANCE

Casual cleaning:

- Please vacuum all fabric surfaces periodically (every 2 weeks recommended)
- Vacuum or clean the roof (every month recommended)
- Wipe hard surfaces as tables, melamine walls (can be done daily according necessity)
- Clean glass facade with mild glass cleaner (can be done daily according necessity)

Recurrent maintenance:

- Please vacuum/clean ventilation system (grills, ventilators and its wings)
- Check electric system (motion sensor, DC connectors and AC power sockets, ventilators)
- Check the status of hinges, handle and seals. Lubricate or change parts if necessary