


FLUFFO

FLUFFO WEB acoustic curtain mounting instructions

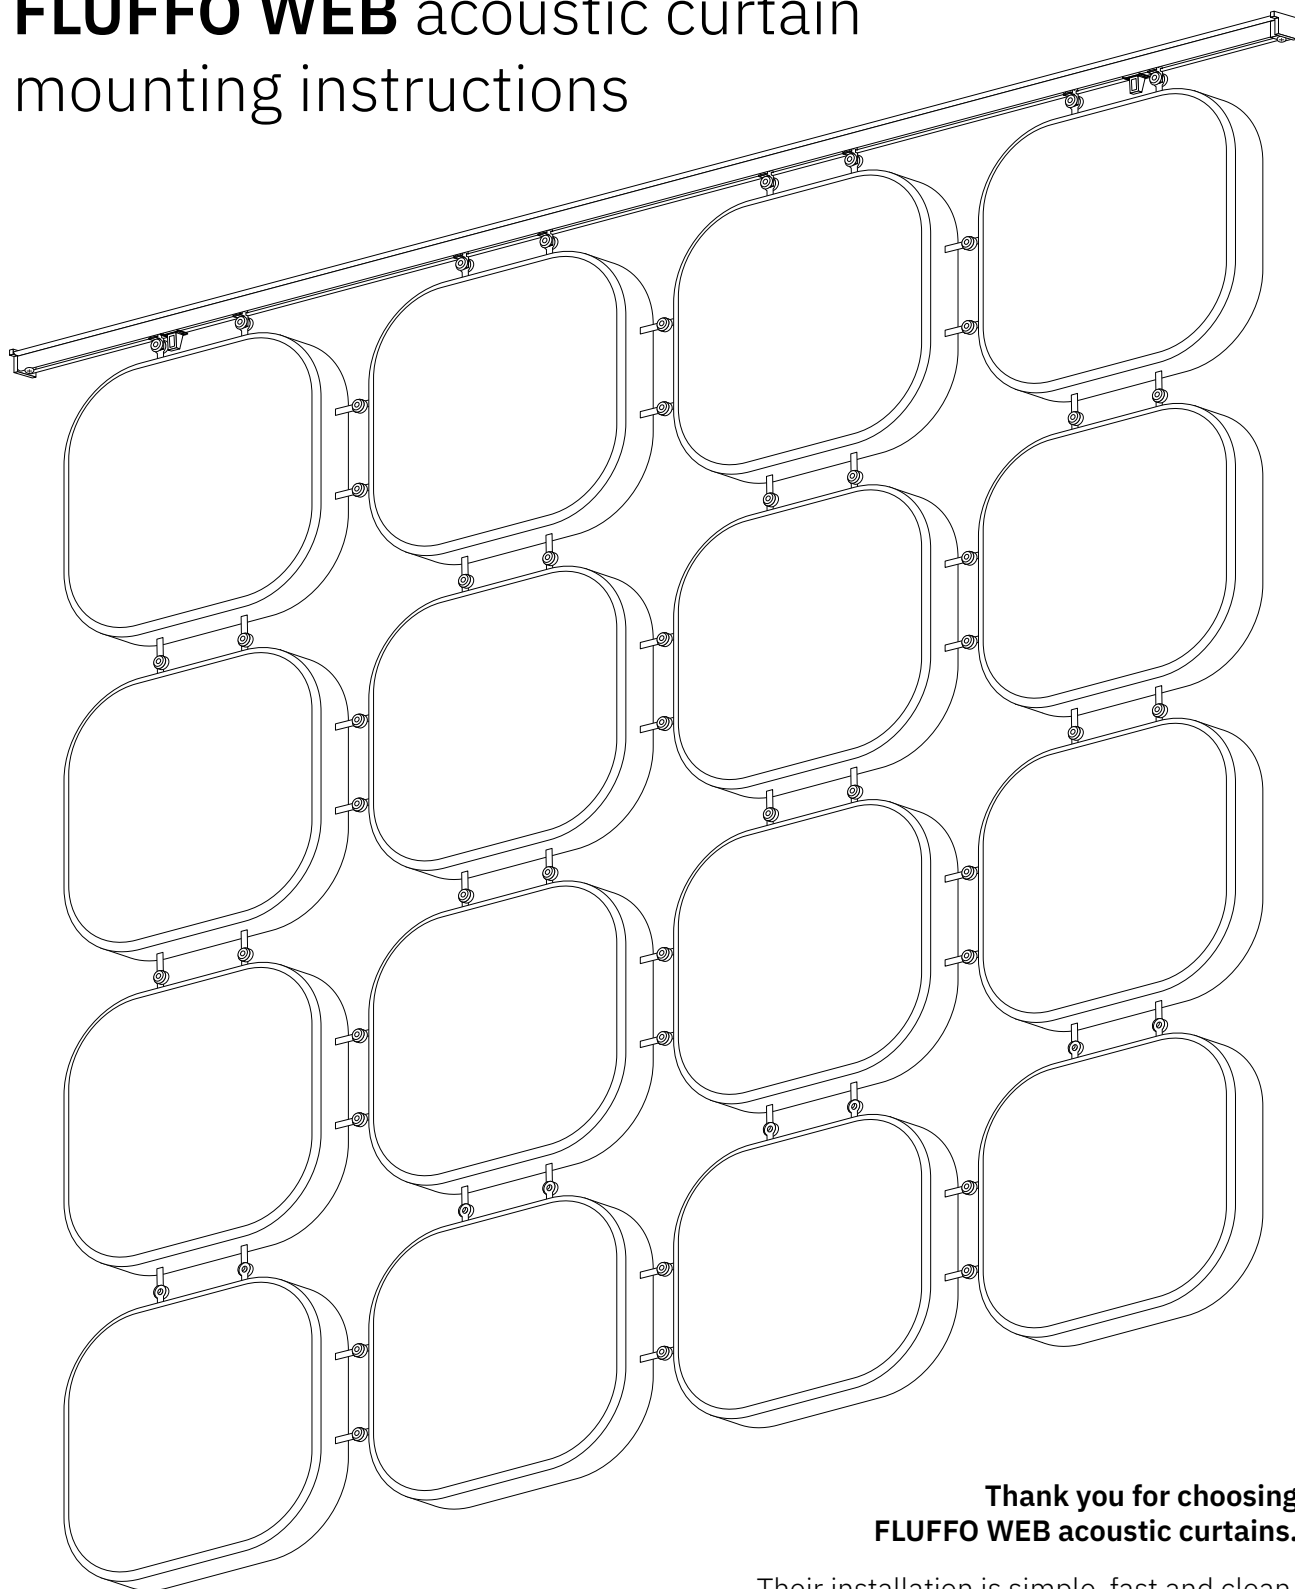

**Thank you for choosing
FLUFFO WEB acoustic curtains.**

Their installation is simple, fast and clean.
You can do it yourself easily, just follow these instructions.

Should you need our help
at any stage of assembly please call:

www.fluffo.pl

+48 502 552 392

DIRECTIONS FOR USE:



The panels should not be exposed to direct, intense sunlight. After some time in such conditions colours might fade and discolorations may appear.



The panels should be installed away from open flames, sparks and other heat sources e.g. electric heaters.



The panels should not be installed in places with high humidity due to the absorptive nature of the foam they are made of.



The foam from which the panels are made may react with strong oxidizing agents (strong acids).



Be careful not to damage the panels with sharp objects, edges or corners of furniture.



Avoid staining the panels.



The panels should be installed out of reach of pets - the foam is not intended for consumption.

CLEANING AND CARE INSTRUCTIONS:



The Fluffo finish covering our panels is anti-static and does not attract dust. However, dust may still settle on them, just like on any furniture. In order to remove dust use a brush with soft bristles or a vacuum cleaner with a standard tip for cleaning upholstered furniture.



Lightweight stains can be removed with a soft sponge slightly moistened with diluted detergent. When cleaning please wipe the whole panel surface, so that you don't leave rubbing traces in one spot. In extreme case, when the stain penetrated deep into the panel and is still visible despite the cleaning, the dirty panel can be easily replaced with a new one.



Be sure not to over rub the panel surface with a wet sponge and avoid strong detergents, such as bleach or washing powder.

The above information is based on our best knowledge, and serves only as a guideline. We are always happy to provide information and technical advice regarding our products. We reserve the right to make changes in our offer at any time. It is up to the customer to make sure that our panels' technical characteristics fit the purpose set by the customer. We will not take responsibility for the consequences resulting from non-compliance with our recommendations.

1 Preparation

Prepare:

A FLUFFO WEB panels and accessories

B Phillips screwdriver

C Allen keys $\varnothing 1.5$ and $\varnothing 2$

D Measuring tape









E Pliers

F Hacksaw

G* Drill

H* Wall plugs and screws

* installation on plasterboard or concrete ceiling

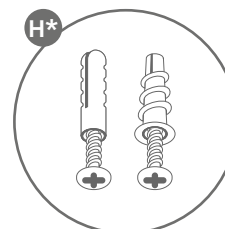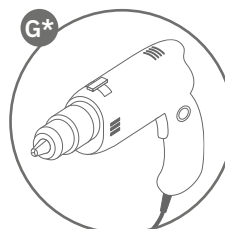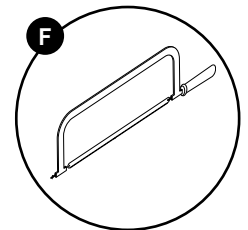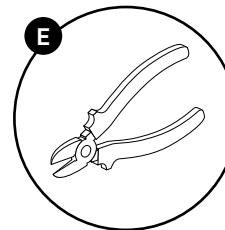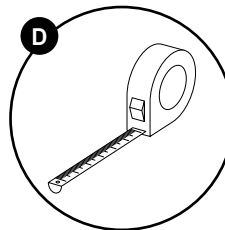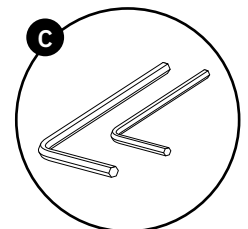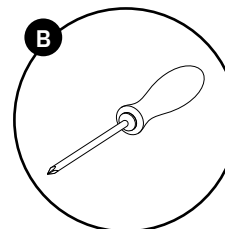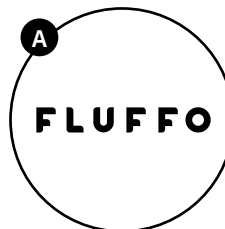


ATTENTION:

Depending on the type of ceiling and the model of FLUFFO WEB panels, the installation may be slightly different. Installation of the rail to a plasterboard or concrete ceiling, will require wall plugs and screws (not included in the FLUFFO WEB accessories).

2A Installation of the WEB rail on a raster / system ceiling

ATTENTION! Before installation, make sure the ceiling is stable and its load-bearing capacity allows for the curtain to be hung.


- A** Choose the ceiling profile to which the WEB rail will be attached, make sure that it can bear the WEB curtain. Plan the mounting brackets placement so that they do not fall on the rail connectors or the places where the ceiling profiles cross.
- B** Mark the places where you will install the mounting brackets for the rail – there should be 5 on each 2 m rail (approximately every 50 cm). The correct places are: approx. 6 cm from the ends of the profile and at $\frac{1}{4}$, $\frac{1}{2}$ and $\frac{3}{4}$ of its length.
- C** Loosen the screws on the brackets.
- D** Mount the bracket – place the bracket against the ceiling profile (**D1**) and turn it so that the hooks of the brackets hitch behind the profile (**D2**)

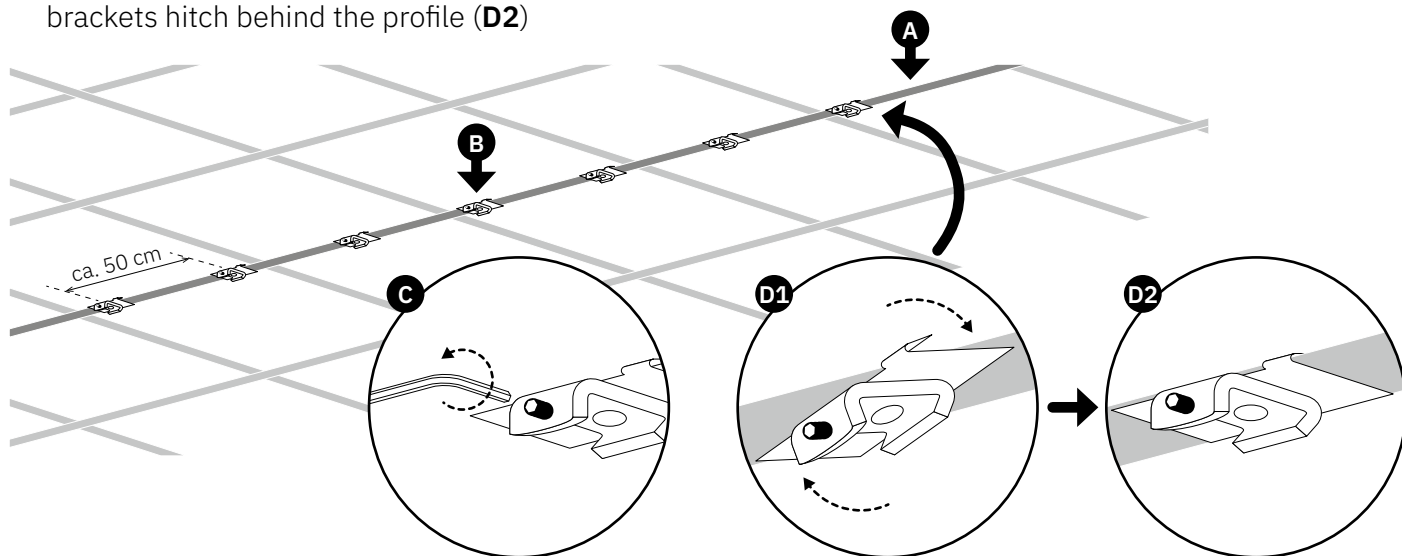

2B Installation of the WEB rail on a plasterboard or concrete ceiling








ATTENTION! Before you begin installation of the rail mounting brackets on the ceiling please verify that there is no collision with electric wires within.

- A** Mark a line on the ceiling where the WEB rail will be installed.
- B** Mark the places where you will install the mounting brackets for the rail – there should be 5 on each 2 m rail (approximately every 50 cm). The correct places are: approx. 6 cm from the ends of the profile and at $\frac{1}{4}$, $\frac{1}{2}$ and $\frac{3}{4}$ of its length, they should not fall on the rail connectors. Drill holes in the ceiling.
- C** Loosen the screws on the mounting brackets.
- D** Fix the wall plugs (**D1**) in the holes and install the WEB rail mounting brackets with screws (**D2**).

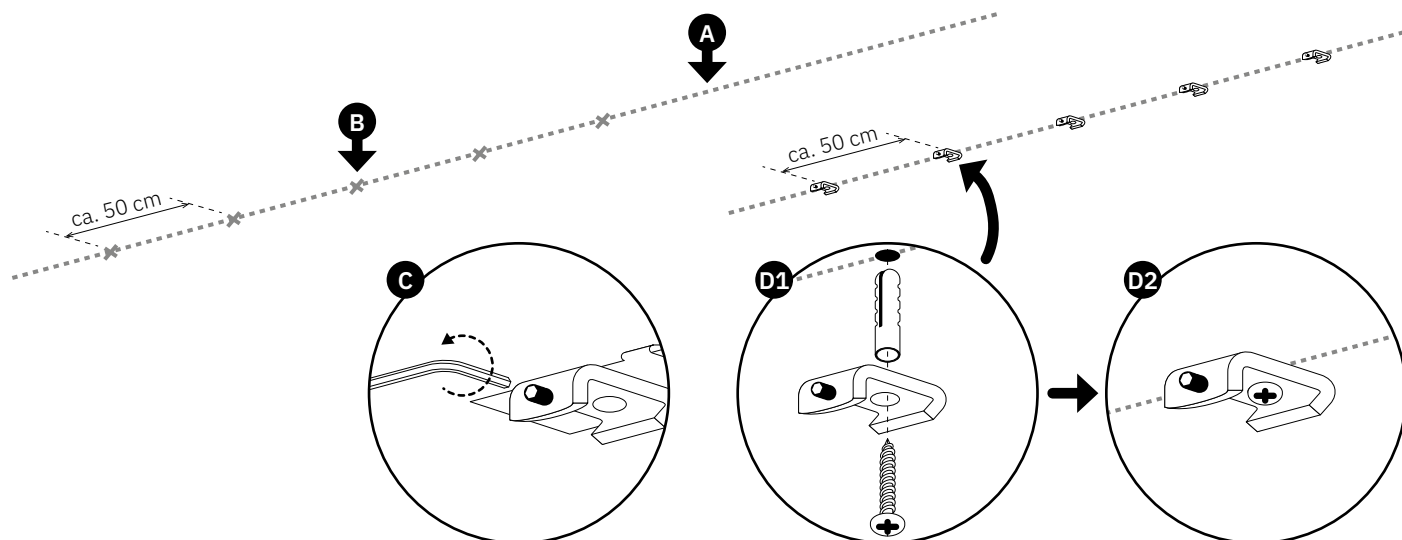

3 Mounting the WEB rail

- A** Determine the required total length of the rail and, if necessary, trim its sections to obtain the desired length (one WEB rail is 2 m long).
- B** Make sure that the rail connector (**B1**) does not coincide with the ceiling brackets (**B2**).
- C** Loosen the four connector screws (**C1**), slide the rail ends into the connector (**C2**) and tighten the screws (**C3**).
- D** Slide the rail into the mounting brackets on the ceiling (**D1**) and tighten the screws (**D2**).

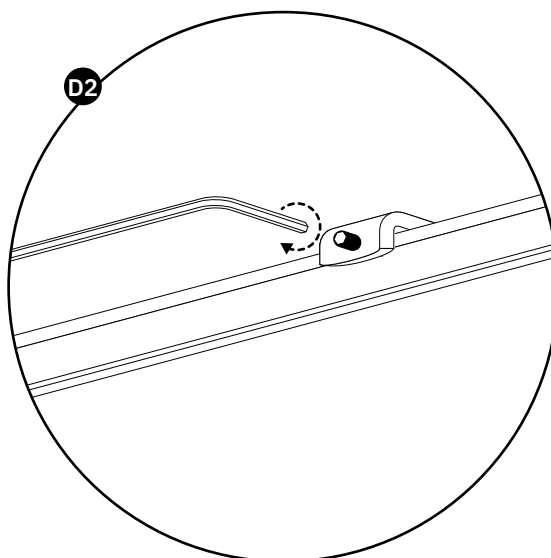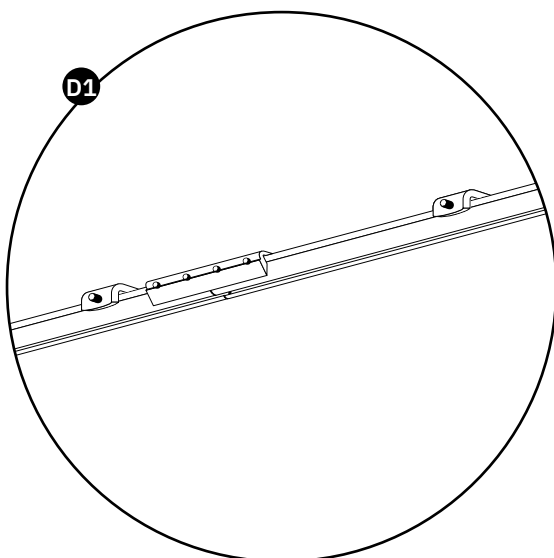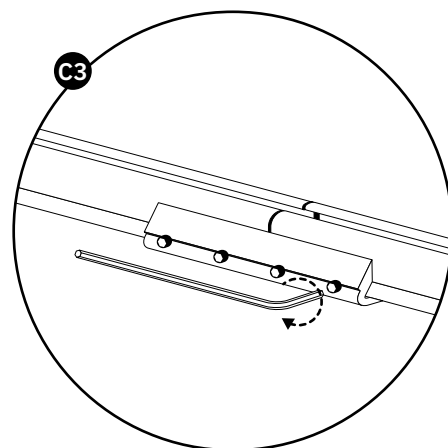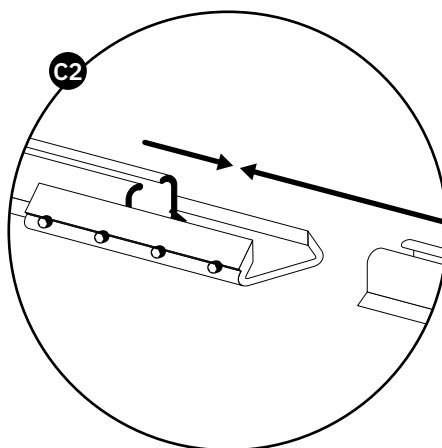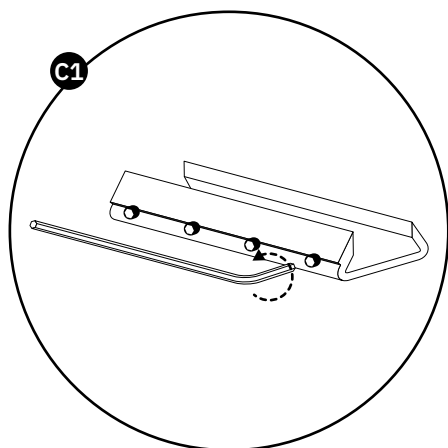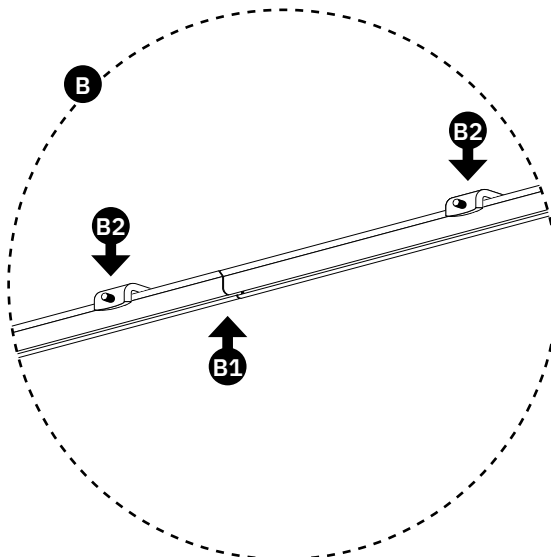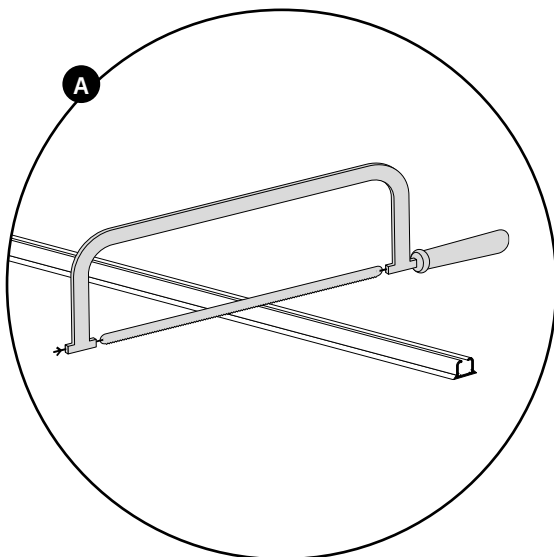


Should you need our help
at any stage of assembly please call:

+48 502 552 392

4 Connecting WEB panels

- A** Prepare a clean surface on which you will connect individual panels, e.g. a large table or floor.
- B** Connect individual panels with the clips into single columns (**B1** and **B2**) (note – use shorter clips).
It is most convenient to arrange and connect two columns at a time (for Hexa and Shell models – 3 columns).
- C** Mount rail sliders (**C1** and **C2**) on the upper straps of the top panels in each column (note – use longer clips).

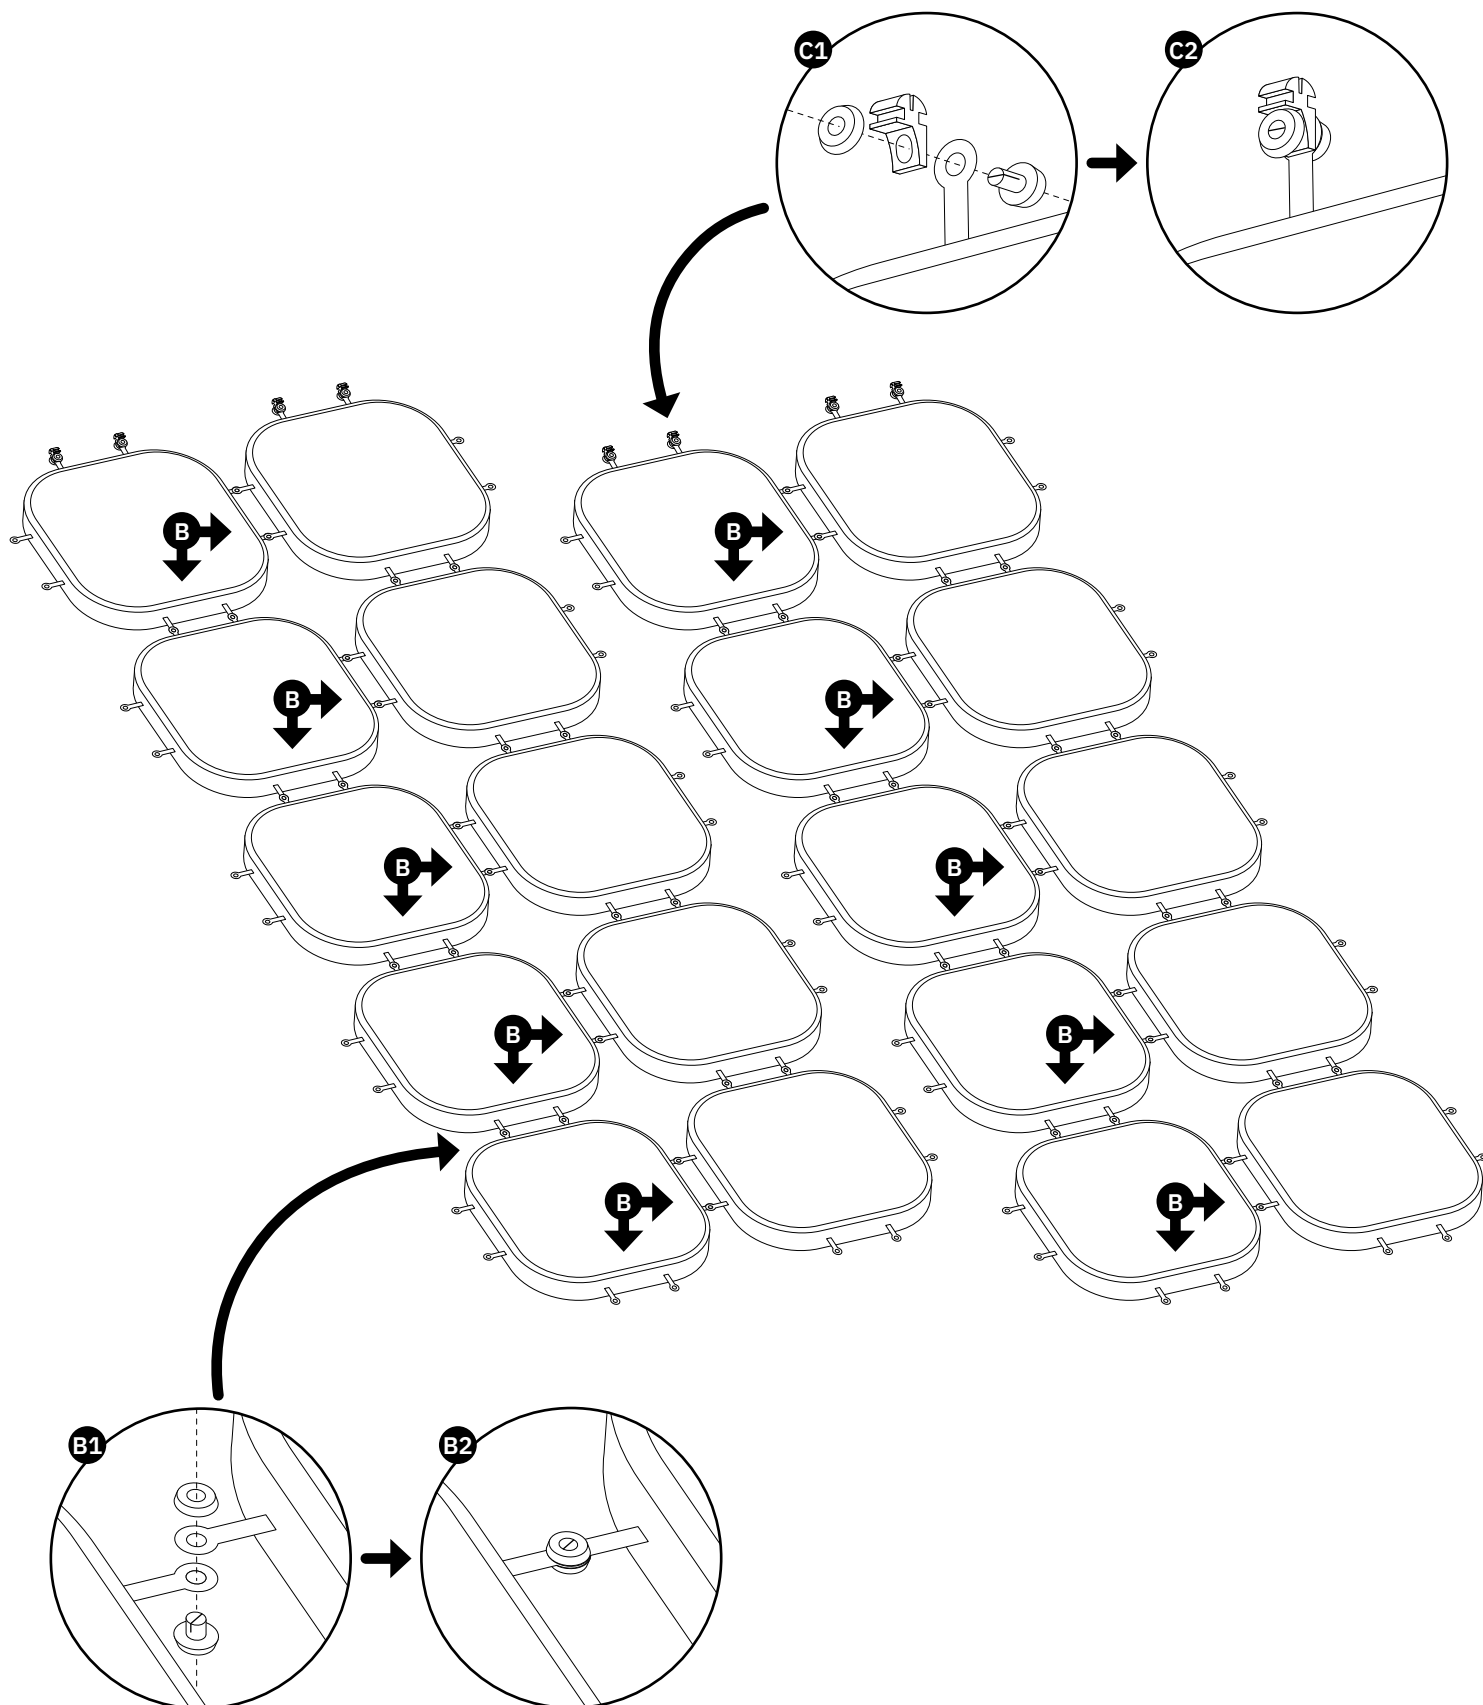

5 Installation of the WEB curtain

- A** Slide the rail sliders one by one into the WEB rail mounted on the ceiling.
- B** Connect the paired columns with clips (similar to point **4B**) and check whether your WEB curtain is in line with the design.
- C** Cut all unnecessary straps with clippers.
- D** Put the end caps on the rails and screw them on.
- E** Insert the stoppers into the rail – place the stoppers on the inside of the outermost sliders (**E1**) and turn the white tips (**E2**). Do not use the stoppers if the curtain is to remain mobile.

