1 2 3 4 5

Call someone to help, you better be two people!

Put the product on a soft surface in order not to damage it. Take the first side of the bench and place it to the seat and back.

Fix the seat with 3 screws TBEI M8x10 Then fix the back with 3 srews TBEI M8X10.

Take the"L" shaped plate with 12 holes and place it in the middle of the bench. Fix it with 12 screws TBEI m6X20.

Repeat the same operation with the other side of the bench. Done!

Assembly instructions


H24. bench w/backrest

Five steps procedure

URBANT®ME

What do you need?

- 12 TBEI M8x10 screws
- 12 TBEI M6X20 screws
- a screwdriver

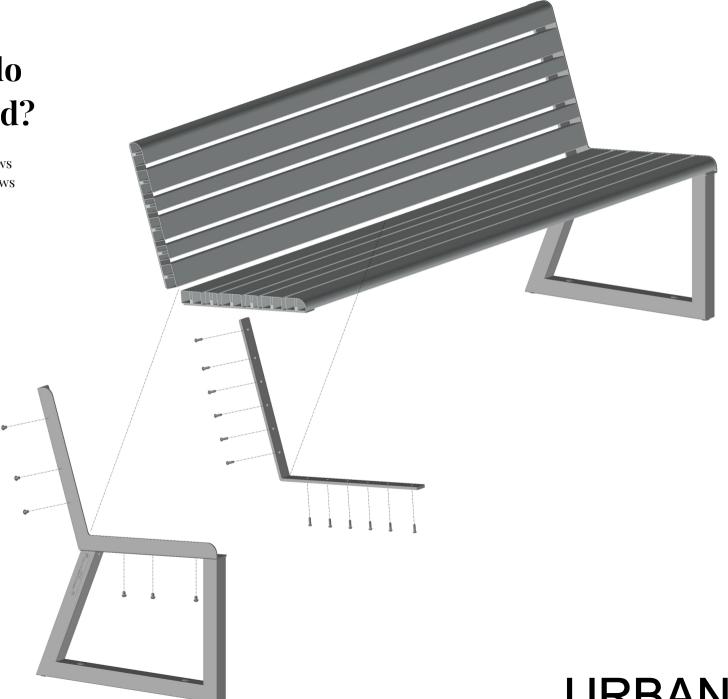

URBANT®ME