


FRISBI

Designed by Achille Castiglioni, 1978


F2500000

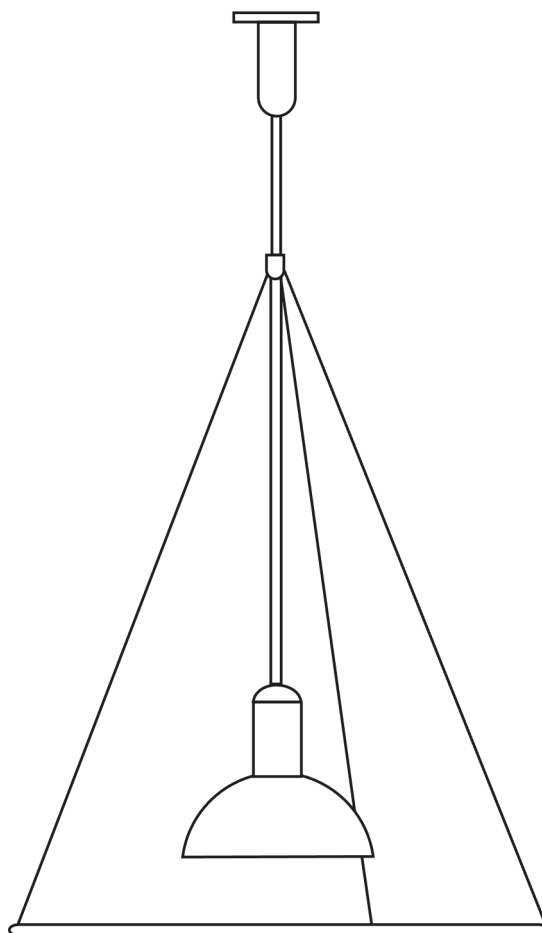

FRISBI

F2500000

EN

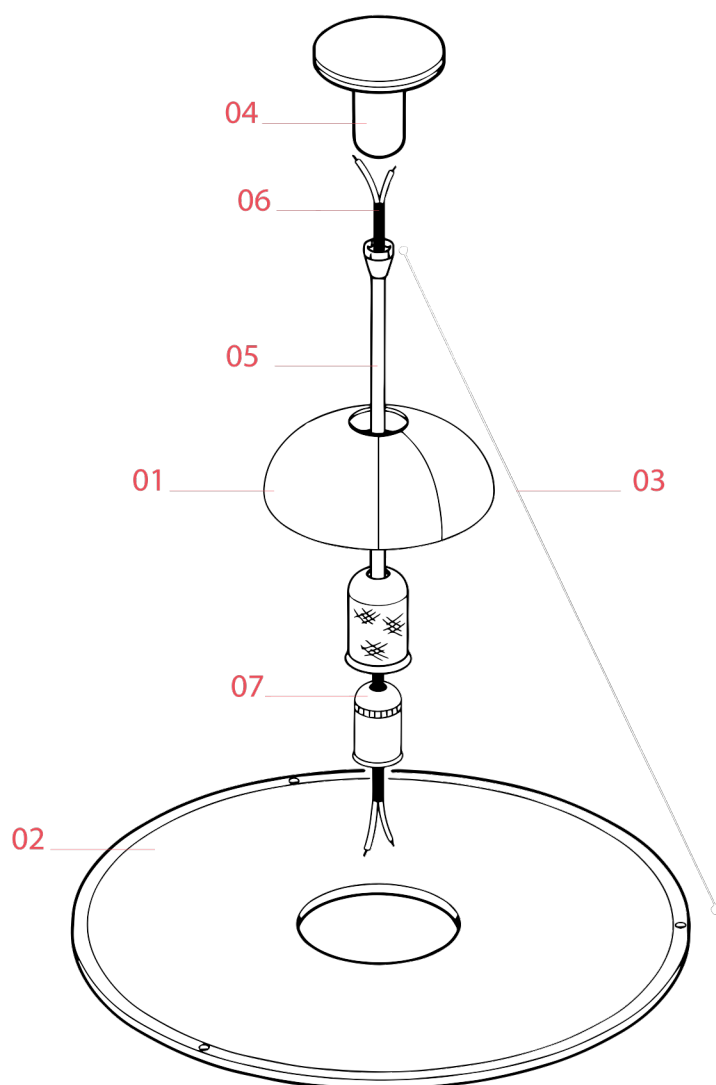

- 01. RF00862 – Reflector
- 02. RF05806 – Plexiglass diffuser
- 03. RF06823 – Steel wires 3 pcs. Series
- 04. RF2500100 – Complete ceiling rose
- 05. RF01439 – Grid support with stem
- 06. RF29648 – 2x1 2,7 mt. power cable
- 07. RF2500200 – Lamp holder set N.T.

FRISBI F2500000

EN

RF00862

REFLECTOR



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF00862

REFLECTOR

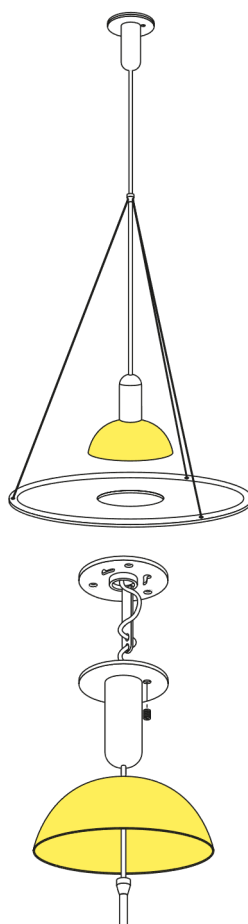


Fig.1

Remove the Plexiglas diffuser (J) by unhooking the steel suspension wires from the "tige" rod clamp (H);
Remove the ceiling rose (D) by unfastening the screw (E) and then disconnect the lamp electrical wires from the electrical terminal box;

Remove the electrical cable from the wall attachment (A) and ceiling rose (D) and then remove the reflector (B) from the "tige" rod (I);

Install the new reflector by inserting it through the electrical cable (C) and through the "tige" rod (I) and then install the appliance (refer to installation sheet).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF05806

PLEXIGLASS DIFFUSER



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF05806

PLEXIGLASS DIFFUSER

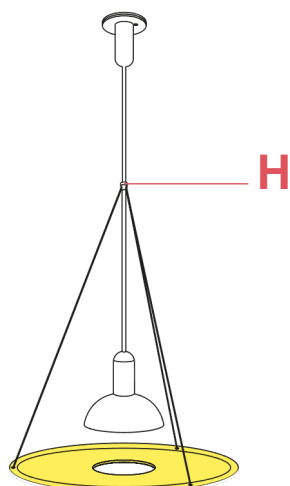


Fig.1

Remove the Plexiglas diffuser (G) by unhooking the steel suspension wires from the "tige" rod clamp (H);

Slide-out the 3 suspension wires (F) from the plexiglass diffuser (G).

Assemble now the new spare-part:

Insert the 3 steel suspension wires (F) through the holes of the plexiglass diffuser (G) and then hook the plexiglass diffuser (G) through the suspension wires to the "tige" rod clamp (H).

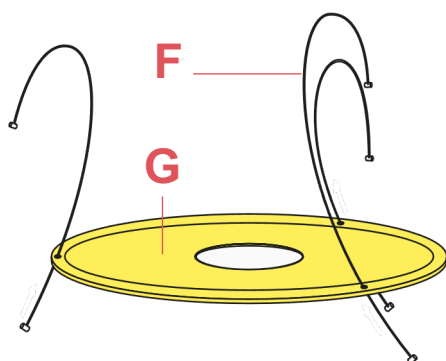


Fig.2

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF06823

STEEL WIRES 3 PIECES



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF06823

STEEL WIRES 3 PIECES

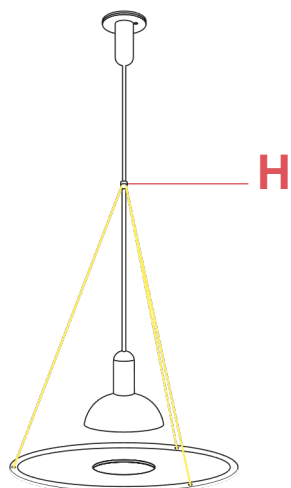


Fig.1

Remove the Plexiglas diffuser (G) by unhooking the steel suspension wires from the "tige" rod clamp (H);

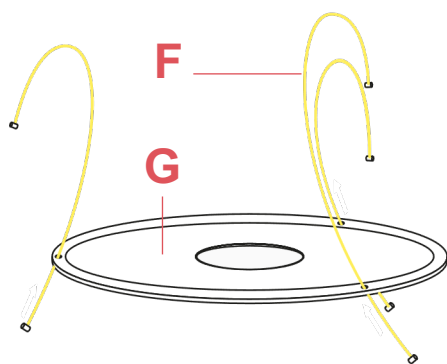


Fig.2

Slide-out the 3 suspension wires (F) from the plexiglass diffuser (G).

Assemble now the new spare-part:

Insert the 3 steel suspension wires (F) through the holes of the plexiglass diffuser (G) and then hook the plexiglass diffuser (G) through the suspension wires to the "tige" rod clamp (H).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF2500100

COMPLETE CEILING ROSE ASSEMBLY



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF2500100

COMPLETE CEILING ROSE ASSEMBLY

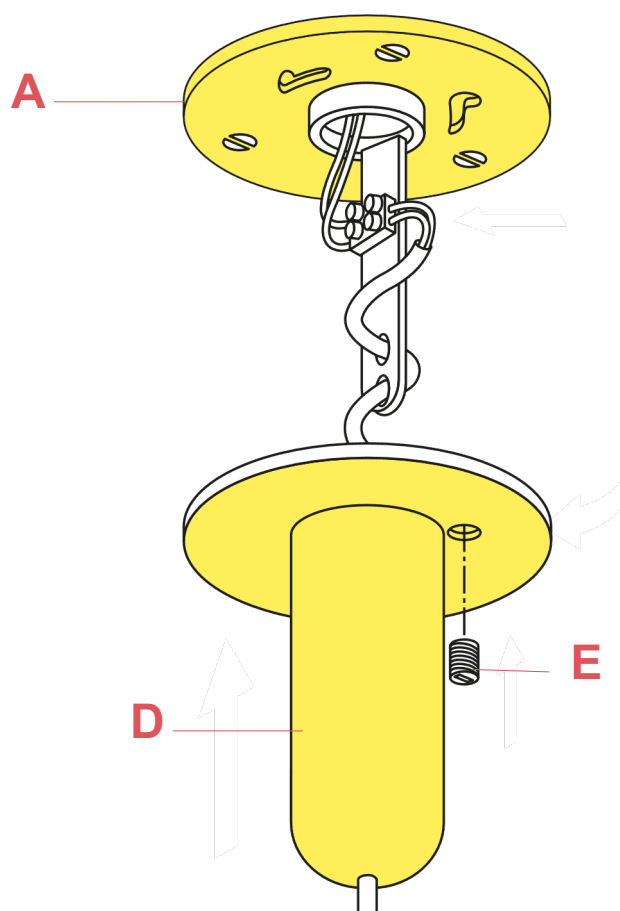


Fig.1

Fix the ceiling attachment (A) to the ceiling and pass the electrical cable through the central hole. Then fix the ceiling rose (D) to the ceiling attachment (A) by locking it through its apposite openings and fasten the screw (E).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF01439

GRID SUPPORT WITH STEM



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF01439

GRID SUPPORT WITH STEM

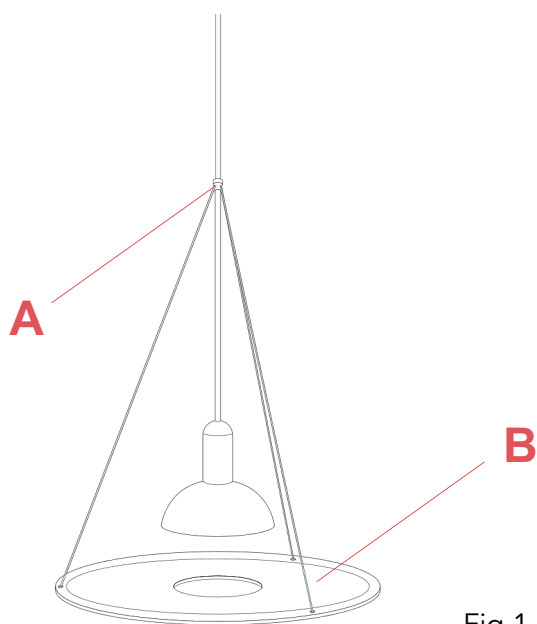


Fig.1

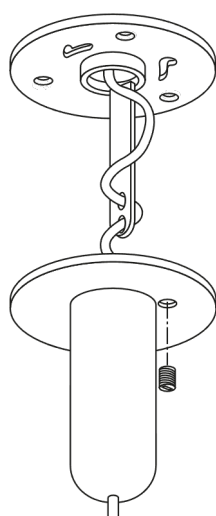


Fig.2

Remove the Plexiglas diffuser (B) by unhooking the steel suspension wires from the "tige" rod clamp (H).

Unfasten the ceiling rose screw and then disconnect the lamp electrical wires from the electrical terminal box;

WARNING!!! During this operation it is necessary to hold the "tige" rod and reflector with one hand to avoid causing damages towards people or objects.

FRISBI F2500000

EN

RF01439

GRID SUPPORT WITH STEM

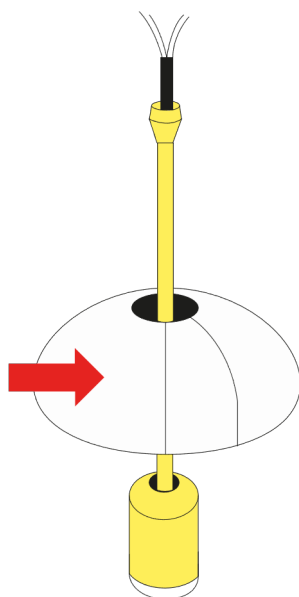


Fig.3

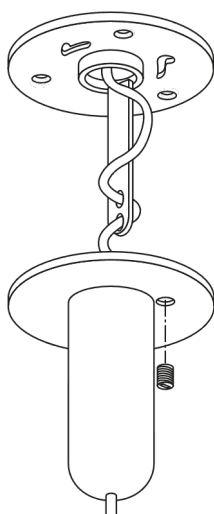


Fig.4

Remove the electrical cable from the wall attachment and ceiling rose and afterwards remove the reflector from the "tige" rod.

Assemble now the new spare-part:
Slide the reflector through the cable and the "tige" rod, insert the electrical cable through the ceiling rose, cut the electrical cable to the desired length and strip-off the isolation of the cable and the wires. Connect the wires to the terminal box and then fasten the ceiling rose screw.

Install the plexiglass diffuser by hooking the three suspension wires to the rod clamp.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF29648

2x1 2.7 MT BLACK ELECTRICAL CABLE



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY



Frisbi
p.15



Glo-ball
Basic 1
p.08



Glo-ball
Basic 2
p.08



Glo-ball
C1
p.05



Glo-ball
C2
p.05



Glo-ball
F1
p.09



Glo-ball
F2
p.09



Glo-ball
F3
p.09



Glo-ball
S1
p.05



Glo-ball
T1
p.05

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY

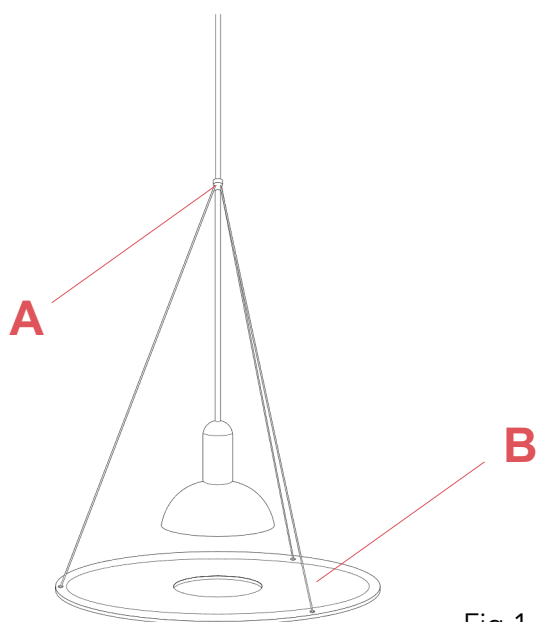


Fig.1

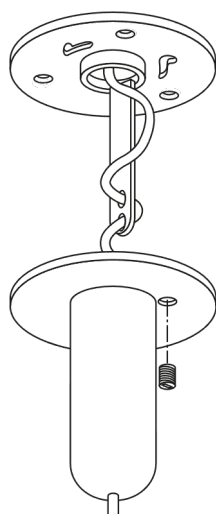


Fig.2

Remove the Plexiglas diffuser (B) by unhooking the steel suspension wires from the "tige" rod clamp (H).

Unfasten the ceiling rose screw and then disconnect the lamp electrical wires from the electrical terminal box;

WARNING!!! During this operation it is necessary to hold the "tige" rod and reflector with one hand to avoid causing damages towards people or objects.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.3

Remove the electrical cable from the wall attachment and ceiling rose and then remove the reflector from the "tige" rod. Unfasten the cable tightener screw present on the suspension cable clamp of the "tige" rod in a way to free the electrical cable from the rod assemble.



Fig.4

It is necessary to break the damaged lamp holder by utilizing a pair of pliers.

WARNING!!! Utilize a pair of gloves and a pair of safety glasses for this operation.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.5

Free the lamp holder support by unfastening the screw.



Fig.6

Remove the lamp holder support by unfastening the support with a pair of pliers

N.B. It is necessary to utilize a pair of pliers with long jaws for this operation.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.7

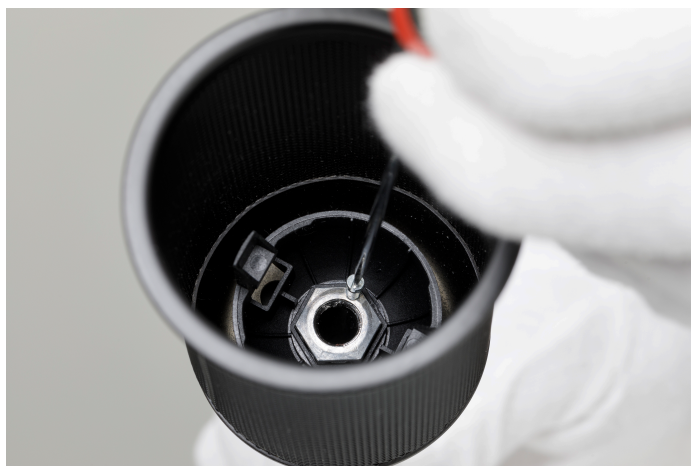


Fig.8

Assemble now the new spare-part:

To re-assemble the new lamp holder support, it is necessary to insert inside the hole, the electrical cable and then fasten (screw) the support back -on the "tige" rod.

Position properly the lamp holder support in a way that the screw corresponds with the threaded hole, once the screw is aligned with the threaded hole lock the support by tightening the screw

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY

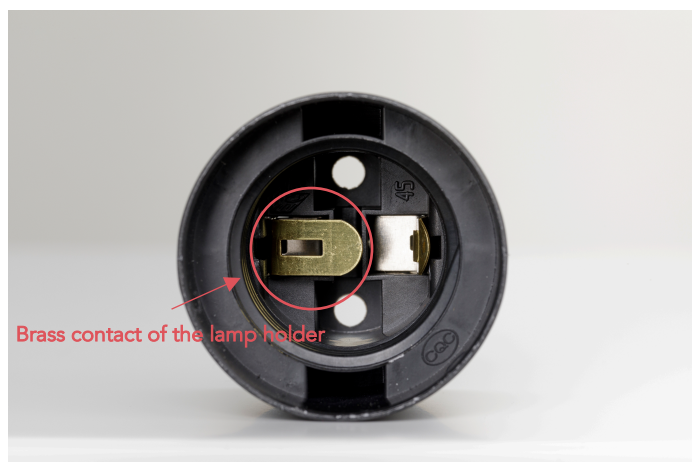


Fig.9



Fig.10



Fig.11

Connect the electrical wires of the lamp holder. Connect the Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the Blue "N" (neutral) wire in the other terminal.

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

FRISBI F2500000

EN

RF2500200

LAMP HOLDER ASSEMBLY

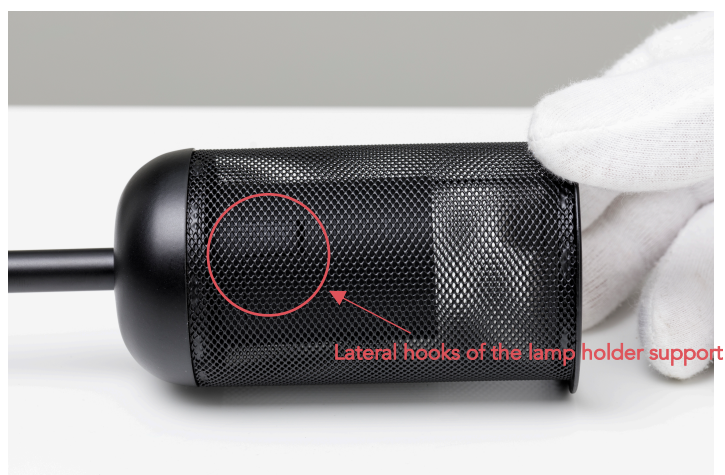


Fig.12



Fig.13

At this point lock the lamp holder to the support by pushing it against the 2 lateral hooks. The support has two lateral hooks. This allows the lamp holder to fix on the support.

Tighten back the screw of the cable tightener present on the top side of the "tige" rod.

Install the lamp back on to ceiling and verify the functioning of the appliance (refer to the installation sheet).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.