
BIBLIOTHEQUE NATIONALE

Designed by R. & Philippe Starck, 2013


F1011030

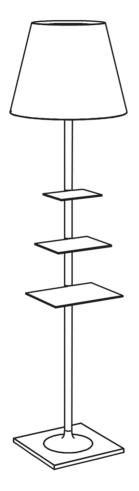

ΕN

BIBLIOTHEQUE NATIONALE

F1011030

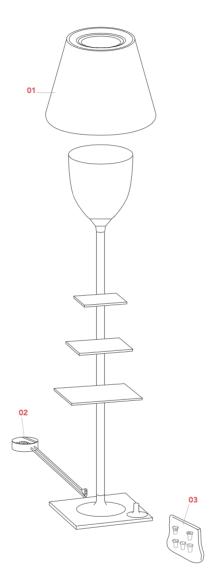

01. F6278030 – Fumé diffuser assembly

- 02. RF28045 Led rondò dimmer 220-240V 40-250W 4-100W
- 03. RF3020100 Kit of n. 5 white feet pads for base

REV. 1 DATE 16/07/2021

EN


BIBLIOTHEQUE NATIONALE

F1011030



FUMÉ DIFFUSER ASSEMBLY



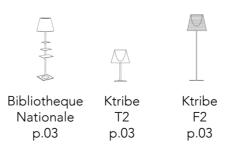

ΕN

BIBLIOTHEQUE NATIONALE

F1011030





Install the external diffuser (A) onto the internal diffuser (B) being careful to make the three pins (C) in the internal diffuser correspond with the relative housings (D) in the external diffuser. Once carried out this operation it is necessary to lock the external diffuser by turning it slightly clockwise.


BIBLIOTHEQUE NATIONALE

F1011030

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



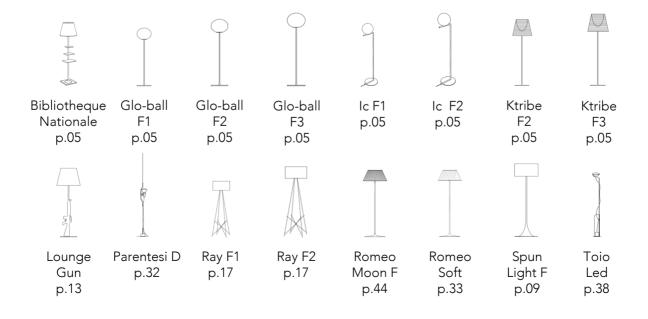

FLOS

EN

BIBLIOTHEQUE NATIONALE

F1011030

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER







Fig.2

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box (refer to fig.1); Unfasten the screw that locks the triangle terminal cover (refer to fig.2);

BIBLIOTHEQUE NATIONALE

F1011030

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER







Fig.4

Turn the dimmer box and remove the terminal cover (refer to fig. 3);

Unfasten the three screws of the cable clamps (refer to fig. 4);

BIBLIOTHEQUE NATIONALE

F1011030

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.5



Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box (refer to fig. 6).

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.


BIBLIOTHEQUE NATIONALE

F1011030

RF3020100

KIT OF QUANTITY 5 WHITE FEET PADS FOR BASE



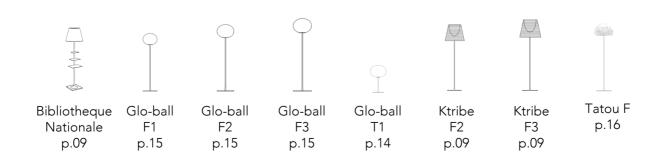


BIBLIOTHEQUE NATIONALE

F1011030

RF3020100

KIT OF QUANTITY 5 WHITE FEET PADS FOR BASE

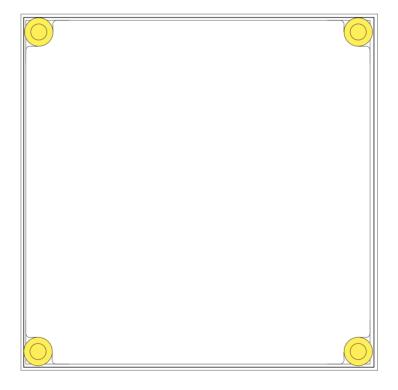



Glue the feet (A) to the base by utilizing glue. We advise to utilize the Loctite 454 glue.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

EN